

# ELIPTIC

## FLUSH MOUNT FIXTURE PLAFONNIER



#105033

CFL bulb alternatives Alternatifs pour ampoule CFL	
INCANDESCENT BULB AMPOULE INCANDESCENTE	COMPARABLE CFL BULB AMPOULE CFL COMPARABLE
25W	9W
40W	11W
60W	13W
75W	18W
100W	23W
150W	40W

**SAFETY INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY**

**WARNING:** Lighted bulb / Shade assembly gets HOT! Do not touch while on.


**CAUTION IMPORTANT: FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN!  
DISCONNECT POWER AT MAIN ELECTRICAL PANEL BEFORE INSTALLATION.**

**CAUTION:** Keep lamp away from curtains, bedding linens, and any other flammable materials.

- Do not look directly at lighted bulb.
- Turn off and allow lamp to cool before replacing bulb, cleaning or other maintenance.
- Do not use in wet locations.
- Do not touch the socket with wet hands.

**ASSEMBLY INSTRUCTIONS**

1. TURN OFF THE POWER.
2. THREAD THE 2 LONG SCREWS "A" INTO MOUNTING PLATE "B" AND ATTACH THE MOUNTING PLATE TO OUTLET BOX "C" WITH SCREWS "D".
3. MAKE THE WIRE CONNECTIONS. CONNECT BLACK TO BLACK WIRE AND WHITE TO WHITE WIRE. IF THE WIRES ARE NOT BLACK AND WHITE, CONNECT THE BLACK WIRE IN THE OUTLET BOX TO THE PLAIN OR ROUNDED SIDE OF THE FIXTURE WIRE. CONNECT THE WHITE WIRE IN OUTLET BOX TO THE RIBBED WIRE OF THE FIXTURE WIRE. ATTACH GROUNDING WIRE "E" TO MOUNTING PLATE GROUNDING SCREW "F".
4. ALIGN THE HOLES IN CANOPY "G" WITH THE 2 LONG SCREWS IN THE MOUNTING PLATE, AND PLACE THE CANOPY ONTO THE SCREWS. SECURE THE FIXTURE IN PLACE WITH KNOBS "H".
5. THREAD PIPE "I" INTO PIPE CONNECTOR "J" AND TIGHTEN WITH HEX NUT "K".
6. SECURE SHADE "L" TO THE CANOPY WITH WASHER "M" AND HEX NUT "N".
7. ATTACH CAP "O" AND FINIAL "P" TO THREADED PIPE "I".

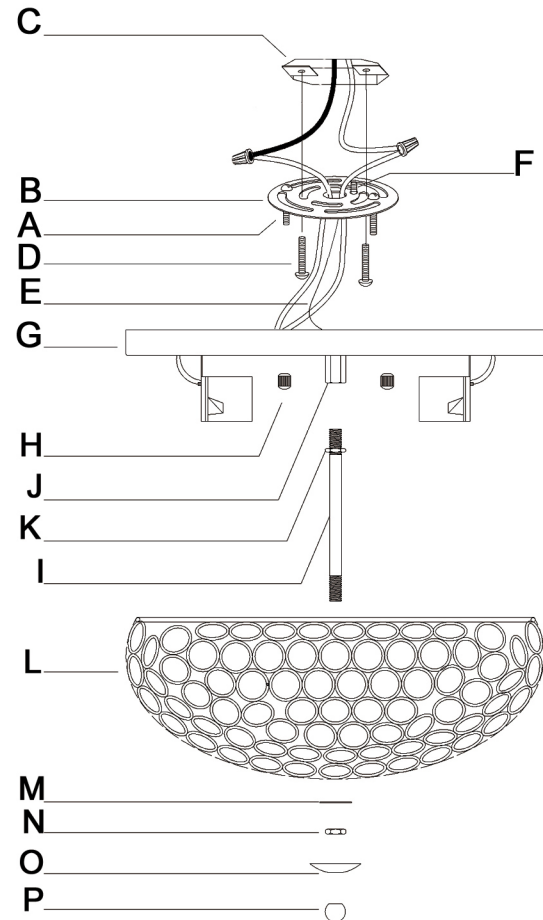

**BULB REPLACEMENT**

- Disconnect the power before replacing bulb.

**TROUBLESHOOTING**

1. If lamp does not light, check the bulb for a broken filament. Replace bulb if necessary.
2. If the external flexible cable or cord of this fixture is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

**MAINTENANCE**

1. To clean, use a soft cloth only.
2. Do not use any chemical or abrasive cleaners.

## RÈGLES DE SÉCURITÉ RELATIVES AUX RISQUES D'INCENDIE, DE CHOC ÉLECTRIQUE ET DE BLESSURES

**AVERTISSEMENT** : L'ampoule et l'abat-jour deviennent CHAUDS lorsque l'ampoule est allumée! Ne pas toucher lorsque l'ampoule est allumée.


**AVERTISSEMENT IMPORTANTES : CETTE FIXTURE DOIT ÊTRE INSTALLÉ PAR UN ÉLECTRICIEN QUALIFIÉ ! COUPEZ LE COURANT AU PANNEAU ÉLECTRICIEN QUALIFIÉ !**

**ATTENTION** : Placer la lampe à bonne distance des rideaux, de la literie et de tout autre matériau inflammable.

- Ne jamais regarder directement l'ampoule allumée.
- Éteindre et laisser refroidir la lampe avant de remplacer l'ampoule, de la nettoyer ou de faire tout autre type d'entretien.
- Ne pas utiliser dans des endroits mouillés.
- Ne pas toucher à la prise électrique avec les mains mouillées.

### INSTRUCTIONS D'ASSEMBLAGE

1. COUPER LE COURANT.
2. INSERER LES 2 VIS LONGUES "A" DANS LA PLAQUETTE DE MONTAGE "B" ET JOINDRE LA PLAQUETTE DE MONTAGE A LA BOITE A ELECTRIQUE "C" AVEC LES VIS "D".
3. RACCORDER LES FILS, LE NOIR AU NOIR ET LE BLANC AU BLANC. SI LES FILS NE SONT PAS NOIR ET BLANC, RACCORDER LE FIL NOIR DE LA BOITE ELECTRIQUE AU FIL UNI OU ARRONDI DE LA FIXTURE ET LE FIL BLANC DE LA BOITE ELECTRIQUE AU FIL RUDE. ATTACHER LE FIL DE MISE-A-TERRE "E" A LA VIS DE MISE-A-TERRE "F" DE LA PLAQUETTE DE MONTAGE.
4. ALIGNER LES TROUS SUR LE CANAPE "G" AVEC LES VIS LONGUES DANS LA PLAQUETTE DE MONTAGE, ET PLACER LE CANAPE SUR LES VIS. SECURISER LA FIXTURE AVEC LES 2 BOUTONS "H".
5. INSERER LE TUYAU "I" AU RACCORD DE TUYAU "J" ET SERRER L'ECROU "K"
6. SECURISER L'ABAT-JOUR "L" AU CANAPE AVEC LA RONDELLE "M" ET L'ECROU "N".
7. SECURISER LE CAPUCHON "O" ET LE FLEURON "P" AU TUYAU FILETE "I".

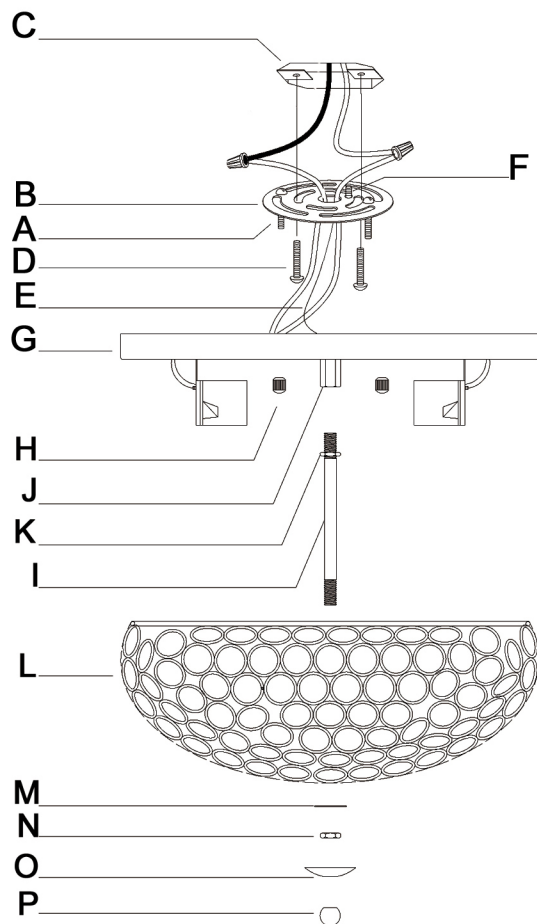

### REEMPLACEMENT DE L'AMPOULE

- Débranchez l'alimentation électrique avant de remplacer l'ampoule.

### DÉPANNAGE

1. Si la lampe ne s'allume pas, regardez l'ampoule pour vérifier si l'un de ses filaments ne serait pas brisé. Remplacez l'ampoule au besoin.
2. Si le câble plat extérieur ou le fil électrique de cette fixture est endommagé, il doit absolument être remplacé par un électricien qualifié afin d'éviter tout danger.

### ENTRETIEN

1. N'utiliser qu'un chiffon doux pour le nettoyage.
2. Ne jamais utiliser de détergent chimique ou abrasif.